Gigaset

AS285

GIGASET. INSPIRING CONVERSATION.
MADE IN GERMANY
GIGASET HELPLINE: 0845 3670812

SIEMENS

Pack contents

1 one Gigaset AS285 Base station
2 one mains adapter
3 one Gigaset AS28H handset
4 one phone cord
5 two batteries
6 one battery cover
7 this Quick start guide

If you have purchased a **model with multiple handsets** the package should contain two batteries, a battery cover, a charging cradle 8 with mains adapter 9 for each additional handset.

Connecting the base station

- Connect power adapter 1 and Phone jack 2 to the base and place the cable recesses.
  Please ensure the power lead is fully inserted.

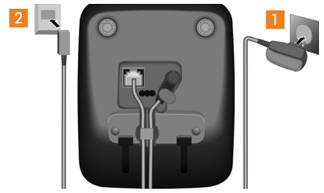

Please note:

- The mains adapter must always be connected, as the Phone will not operate without a mains connection.
- **Always use the power adapter and Phone cord supplied.** Pin connections on Telephone cables can vary.

Connecting the charging cradle (if included)

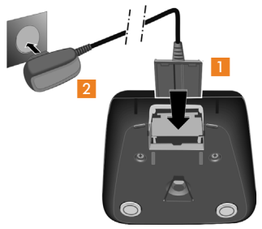

- Connect the flat plug from the mains adapter 1.
- Plug the mains adapter into the plug socket 2.

If you need to disconnect the plug from the charging cradle, press the release button 3 and disconnect the plug 4.

Preparing the handset

- **Insert the batteries the right way round.** The polarity is indicated in/on the battery compartment.
- **Then** slide the battery cover back into the main casing until it clicks into place.

If you need to open the battery cover, for instance to replace the batteries, place your fingertip in the grooved area on the top of the cover and slide down.

Initial charging and discharging of the batteries

The correct charge status can only be displayed if the batteries are first fully charged **and** discharged.

- Place the handset in the charger for **7** hours.

Then remove the handset from the charger, make and receive Phone calls, setup the Phone etc. and do not put it on the charger until the batteries are fully discharged.

Setting the date and time

Set the date and time so that the correct date and time can be assigned to incoming calls, and so that the alarm can be used.

- Press the key below **MENU** on the display screen to open the main menu.

- Press the bottom of the control key ...

... until the **Settings** menu item appears.

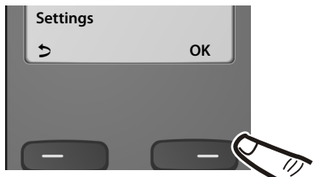

- Press the key below **OK** on the display screen to confirm your selection.

The **Date/Time** menu item appears on the display.

- Press the key below **OK** on the display screen to open the input field.

- The active cursor position is flashing. Enter day, month and year as an 6-digit number via the handset, e.g. **0 1 10 10** for 01/10/10.

Answer machine

Message Indication Key ✉ on handset will flash to indicate one or all of the following events:

- missed calls (if caller ID is enabled for your line numbers will be shown)
- new messages on the answer machine
- new text messages (SMS) received

Activating/deactivating the answer machine

MENU → Voice Mail → OK → Answer Mach. → OK (✓ = on)

If the answer machine is activated, the answer machine icon ⌾ will be displayed in the header.

To retrieve your messages, just press the flashing ✉ key on your handset.

Dial tone

The dial tone will only be heard when pressing the ✆ call button for 2 seconds.
A short press will open the redial list.

You can also use the 🔊 speaker button.

Display in idle status

- **2**: internal number, if more then one handset is registered
- ⌾: answer machine is activated
- Battery charge status:
  - – ▭ ▭ ▭ ▭ (empty to full)
  - – ▭ flashes: batteries almost empty
  - – ▭ ▭ ▭ flashes: charging procedure

Registration handset

Your handsets should already be registered by default, if your handset is flashing the text "No Base" then it can be that:

- Your base station is not switched on, please check if the power supply is connected properly.
- There is too much distance between the handset and base.
- Your handset has not been pre-registered in the factory.

In the case that the handset has not been pre-registered, or you want to register an additional handset to your base station, use the manual registration procedure below.

Automatic registering procedure

Place the handset with the display facing up in the base station.

The handset registers automatically. Registration can take up to 5 minutes. Do not remove the handset from the base station during this time.

Manual registration procedure

1. On the handset:

MENU → Settings → OK → Handset → OK → Register HS → OK → enter the system PIN for the base and press **OK**. Default PIN = 0000

2. On the base station:

Within 60 seconds of entering the system PIN, press and hold the registration/paging key 📡 (min. 3 seconds). Registration takes approx. 1 minute.

You can register up to **four** handsets to your base. You can also register other Gigaset handsets and handsets from other devices with GAP functionality.

Frequently asked questions

Q: There is no dial tone.
A: Press call button for 2 seconds (long press) to obtain dial tone.
A short press opens the redial list.

Q: The line is crackling / not clear.
A: Have you used the new line cable provided? Please do not use an old cable.

Q: The display is not clear / seems to be broken.
A: The display is protected by a plastic film, please make sure you have removed the protective film.

Q: The handset is not registered.
A: If your handset is not registered, please follow the Registration handset procedure. (Described on this page)

Q: The caller ID is not working.
A: Have you subscribed to this service (CLIP) from your provider?

Q: Message indicator flashing and I cannot retrieve my message.
A: Message indicator will flash to indicate missed calls as well as new messages of text messages. (Described on this page)

Please check:

- **Have you used the phone cord supplied** ☐
- **Have you fully inserted the power cable into the base station** ☐
- **Have you inserted the batteries correctly** ☐
- **Have you charged the batteries for 7 hours** ☐
- **Have you set up the Date/Time** ☐

To download the latest manuals, visit our web-site: http://www.gigaset.com

You have questions? As a Gigaset customer, you can take advantage of our comprehensive service offerings. You can find help quickly in this User Manual and in the service pages of our Gigaset online portal: http://www.gigaset.com

If you have problems setting up or operation this product please call
GIGASET UK HELPLINE 0845 3670812
GIGASET IRL HELPLINE 1850 777277

Product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark as well as on the bottom of the base station for which country/countries the equipment has been developed. If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).
In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

The handset and base at a glance

The handset at a glance

1 Charge status of the batteries
2 Answer machine icon
3 Display keys
4 Message key **Flashes:** new messages received
5 Handsfree key
6 Control key (▲)
7 Talk key
8 Directory key (**press** down)
9 End call and On/Off key
10 Ringer on/off (press and hold in idle status)
11 Keypad lock on/off (press and hold)
12 Recall key
- Consultation call (flash)
- Dialling pause (press and hold)

13 Microphone
14 "Microphone off" key

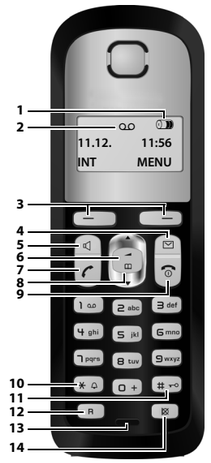

Display keys on handset:
Pressing a key launches the function that appears above that key in the display.

Display icon	Function when pressed
INT	Call other registered handsets.
MENU	Open main/ submenu.
↩	Go back one menu level.
▲▼	Scroll up/down or adjust volume with ▲.
◀▶	Move cursor to left/ right with ▲.
◀C	Backspace deletes one character at a time from right to left.
OK	Confirm menu function or save entry.

The base station at a glance

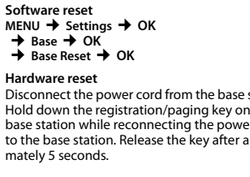

1 **Registration/paging key:**
Search for handsets (press **briefly**, "Paging")
Register handsets (press and **hold**).
2 **On/Off key:** activate and deactivate answer machine.
Lights up: answer machine is activated.
Flashes: there is at least one new message or message is in the process of being recorded.
Flashes very quickly for about 4 seconds: memory is full.
3 **Volume keys:** (– = quieter; + = louder)
During message playback: adjust the speaking volume.
While phone is ringing: adjust ringer volume.
4 **Play/Stop key:**
Play back messages from the answer machine, or cancel playback.

During message playback:
5 Delete current message.
6 Skip to the start of the current message (press once) or go to the previous message (press twice).
7 Skip to next message.

Making calls

Making external calls and ending calls

External calls are calls using the public telephone network.
(Enter the phone number) ➔ ✆.
The phone number is dialled. (Or you can **first** press and **hold** ✆ [dial tone] and then enter the number.) During the call you can adjust the earpiece volume using ▲ and set the volume with ▲.
End the call/cancel dialling:
Press the end call key ☎.
You can automatically insert a network provider dialling code before any phone number.

Accepting a call

The handset indicates an incoming call by ringing and by a display on the screen. Press the talk key ✆ to accept the call. When **Auto Answer** is activated, simply remove the handset from the base station/charging cradle. In idle status, use ▲ to activate the menu for setting the call volume and use ▲ to set the volume.

Calling Line Identification

When you receive a call, the caller's number will be displayed on your handset; the caller's name will be displayed if it is stored in the directory.

Requirements:
1 You have asked your network provider for the caller's number (CLIP) to be displayed on your handset screen.
2 The caller has asked the network provider for his number to be identified (CLI).

⋘ⓐ⋙ appears in the display if you have not requested Calling Line Identification, **Withheld** appears if the caller has withheld CLI, and **Unavailable** appears if CLI has not been requested.

Switch to mute

You can mute your handset when making external calls. Your caller can no longer hear you. Press the "Microphone off" key ⊠ during the call to activate/deactivate the function.

Using the directory and lists

Directory

To open the directory: press 🕮.
You can store up to 40 numbers (max. 32 digits) and associated names (max. 14 characters).
Enter letters/characters.

Saving the first number in the directory

🕮 ➔ **New Entry?** ➔ **OK** ➔ (enter number) ➔ **OK** ➔ (enter name) ➔ **OK**

Storing a number in the directory

🕮 ➔ **MENU** ➔ **New Entry** ➔ **OK**
➔ (enter number) ➔ **OK**
➔ (enter name) ➔ **OK**

Selecting a directory entry

Open the directory with 🕮. You have the following options:
- Use ▲ to scroll through the entries until the required name is selected.
- Enter the first character of the name and scroll to the entry with ▲, if required.

Dialling with the directory

🕮 ➔ ▲ (select entry) ➔ ✆

Using other functions

🕮 ➔ ▲ (select entry) ➔ **MENU**
The following functions can be selected with ▲:

New Entry	Save new phone number.
Show Number	Display the phone number.
Use Number	Edit or add to the number. Then dial or select other functions from the **MENU**.
Edit Entry	Edit selected entry.
Delete Entry	Delete selected entry.
Send Entry	Send a single entry to another handset.
Delete List	Delete **all** directory entries.
Send List	Send the complete list to another handset.
Shortcut	For shortcuts, assign the current entry to a key.

Using the directory and lists

Using shortcut keys

You can assign directory entries to the keys 0 and 2–9:
🕮 ➔ ▲ (select entry)
➔ **MENU** ➔ **Shortcut** ➔ **OK**
➔ (press the key you want to assign the entry to)

To dial, press and **hold** the required shortcut key.

Transferring the directory to another handset

Requirements:
- The sending and receiving handsets must both be registered to the same base station.
- The other handset and the base station can send and receive directory entries.

🕮 ➔ ▲ (select entry) ➔ **MENU**
➔ **Send Entry** / **Send List** ➔ **OK**
➔ (enter the internal number of the receiving handset) ➔ **OK**

Last number redial list

This list contains the ten last dialled numbers.

Dialling from the last number redial list

✆ (**press** briefly)
➔ ▲ (select entry)
➔ ✆

Managing entries in the last number redial list

✆ (**press** briefly)
➔ ▲ (select entry)
➔ **MENU**

You can select the following settings:

Use Number	Edit or add to the number. Then dial or select other functions from the **MENU**.
Copy to Dir.	Copy an entry to the directory.
Delete Entry	Delete selected entry.
Delete List	**Delete** all entries.

Calls list/voicemail (network mailbox) list

An advisory tone sounds and the message key flashes as soon as a **new entry** appears in the calls list/voicemail list. A message appears in the display.
When you press the ✉ key, all the lists are displayed. If only one list contains new messages, this will be opened automatically.

Please note:
If calls are saved in the network mailbox, you will receive a message if the appropriate settings have been set (depending on your network provider).

Calls list

Precondition: CLIP
Depending on the type of list set, the calls list contains
- answered calls
- missed calls
- calls recorded by the answer machine

Depending on the type of list set, all numbers of the last 25 incoming calls are saved or just the missed calls are saved.
The calls list is displayed as follows:

CallsList 01+02

Number of new entries + number of old, read entries

Open the calls list

✉ ➔ **CallsList 01+02** ➔ **OK**
The last incoming call is displayed.
If necessary, use ▲ to select another entry.

Using other functions

▲ (select entry) ➔ **MENU**
The following functions can be selected with ▲:

Delete Entry	Delete current entry.
Copy to Dir.	Copy an entry to the directory.
Date/Time	Call date and time (if set).
Status	**New Call**: new missed call. **Old Call**: entry already read. **Answ.**: call taken.
Delete List	**Warning!** All **old and new** entries will be deleted.

Calling back a caller from the calls list

✉ ➔ **CallsList 01+02** ➔ **OK**
➔ ▲ (select entry) ➔ ✆

Answer machine operation

The answer machine can be operated from the handset or by using the key on the base station. The telephone is supplied with a pre-recorded announcement. You can only record your own announcement messages using the handset. This pre-recorded announcement is used if no personal announcement is available.
If the memory is full, the answer machine switches itself off automatically. It activates again automatically when you delete old messages.

Activating/deactivating the answer machine

MENU ➔ **Voice Mail** ➔ **OK** ➔ **Answer Mach.**
➔ **OK** (✓ = **on**)
When the answer machine is switched on, the ⌀ icon appears in the display.

Recording your own announcement

MENU ➔ **Voice Mail** ➔ **OK** ➔ **Announcements**
➔ **OK** ➔ **Rec announce** ➔ **OK**
➔ **Speak after OK** ➔ **OK**
You hear the ready tone (short tone). Now say your announcement (at least 3 seconds).
Press **OK** to confirm or press ☎ or ↩ to reject your recording. After recording, the announcement is played back for you to check.

Please note:
Recording ends automatically when the max. recording time of 170 seconds is reached or if there is a break in speaking of more than 2 seconds.

Playing/deleting messages

Open the voicemail list to play back messages.
Stopping and controlling playback
During message playback:

2	Stop playback. Press **2** again to resume.
▲	Go to the start of the current message.
2 x ▲	Skip to the previous message.
▼	Skip to the next message.
2 x ▼	Go to the next message but one.

Deleting individual messages

While playback is paused, press the ◀C display key.
Deleting all old messages
During playback or pause:
MENU ➔ **Delete all old**
➔ **OK** (confirm the security prompt)

Accepting call from answer machine

You can still accept a call while the answer machine is recording the message by pressing ✆. Recording stops and you can speak to the caller.

Setting up the answer machine

The answer machine has already been preset at the factory. Make individual settings using the handset.
Details on how to set a delay time, after which the answer machine is to answer a call, as well as details on how to set the recording length and activate call screening during the recording, are available from the Menu tree.

Assigning key 1 for fast access to the answer machine (network mailbox)

Simply press and **hold** key **1** on the handset and you will be connected directly to the answer machine (network mailbox).

Remote operation when on the move

You can check and activate your answer machine from any other telephone (hotel, pay phone etc.).

Requirements:
- You have set a system PIN other than 0000.
- The phone you are using for remote operation has touch tone dialling (DTMF), i.e. you hear different tones when you press the keys.

Calling the answer machine and playing back messages

(Dial your own number) ➔ while listening to your announcement: press the 9 key and enter the system PIN

The following keys are used for operation:

1	Go to the start of the current message. Press twice to go back to the previous message.
2	Stop playback. Press again to resume.
3	Skip to next message.
0	delete current message.

Activating the answer machine

(Enter your own number and allow the phone to ring until you hear the message: "Please enter PIN") ➔ enter system PIN

Phone settings

Changing the display language

MENU ➔ **Settings** ➔ **OK**
➔ **Handset** ➔ **OK**
➔ **Language** ➔ **OK**
➔ select the language ➔ **OK**
The current language is indicated by ✓.

If you accidentally choose a language you do not understand:
MENU ➔ **4 2 1**
(press the keys one after the other)
Select the correct language with ▲ and press **OK.**

Resetting the handset

You can reset individual settings and changes that you have made. Entries in the directory, the calls list and the handset's registration to the base station will be retained.
MENU ➔ **Settings** ➔ **OK**
➔ **Handset** ➔ **OK**
➔ **Reset Handset** ➔ **OK**
Cancel the reset with ☎.

Restoring the base station to the factory settings

When restoring factory settings:
- All handsets are de-registered
- Individual settings are reset
- All lists are deleted
- The system PIN is reset to the original code **0000**

Only the date and time are retained.

Software reset
MENU ➔ **Settings** ➔ **OK**
➔ **Base** ➔ **OK**
➔ **Base Reset** ➔ **OK**

Hardware reset
Disconnect the power cord from the base station. Hold down the registration/paging key on the base station while reconnecting the power cable to the base station. Release the key after approximately 5 seconds.

Repeater mode

With a repeater you can increase the range of your base station. You will need to activate repeater mode. Repeater mode and Eco mode or Eco mode+ cancel each other out.

Operating the base station on the PABX

The following settings are only necessary if your PABX requires them, see the user guide for your PABX.

When entering the digits, enter them **slowly** one after the other.

Changing the dialling mode

MENU ➔ **4 3 9 1 1**
➔ The number for the set dialling mode flashes:
0 = touch tone dialling (DTMF);
1 = dial pulsing (DP)
➔ enter number ➔ **OK**.

Setting recall

MENU ➔ **4 3 9 1 2**
➔ The number for the current recall flashes:
0 = 80 ms; **1** = 100 ms; **2** = 120 ms; **3** = 400 ms; **4** = 250 ms; **5** = 300 ms; **6** = 600 ms; **7** = 800 ms
➔ enter number ➔ **OK**.

Changing pause after line seizure

You can set the length of the pause inserted between pressing the talk key ✆ and sending the phone number.
MENU ➔ **4 3 9 1 9**
➔ The number for the current pause length flashes: **1** = 1 sec.; **2** = 3 sec.; **3** = 7 sec.
➔ enter number ➔ **OK**.

Changing the pause after the recall key

MENU ➔ **4 3 9 1 4**
➔ The number for the current pause length flashes: **1** = 800 ms; **2** = 1600 ms; **3** = 3200 ms
➔ enter number ➔ **OK**.

Locating a handset ("paging")

You can locate your handset using the base station.
- **Briefly** press the registration/paging key on the base station.
- All handsets will ring simultaneously ("paging"), even if the ringer tones are deactivated.

End paging: briefly press the registration/paging key on the base station or the talk key ✆ on a handset.

General

Using several handsets

Making internal calls

Internal calls are free calls to other handsets that are registered to the same base station.
To make a call to other handsets, press
- **INT** ➔ (1...4, enter internal number of the handset), the handset is called **or**
- **INT** ➔ star key *, all handsets are called.

When a participant answers you can speak to them. To end the call, press the end call key ☎.

Internal consultation call/ connecting a call

You are in conversation with an **external** participant. Press the **INT** key and call one or all handsets. The external participant hears the hold music.
- **Before** the internal participant has answered, press the end call key ☎; the call is diverted to the participant who answers the call.
- **After** the internal participant has answered, you can talk to him. Press the end call key ☎; the call is diverted, **or** press the display key ↩; you are reconnected to the external participant.

Listening in to an external call

You are conducting an external call. An internal participant can listen in on this call and take part in the conversation (conference).

Precondition: The **Listening in** function must be activated.

Activating/deactivating listening in
MENU ➔ **Settings** ➔ **OK** ➔ **Base** ➔ **OK**
➔ **Listening in** ➔ **OK** (✓ = on)

Internal listening in (conference)
You want to listen in to an existing external call. Press and hold the ✆ **key**. You can listen in to the call. All participants hear a signal tone.
To end: press the end call key ☎. All participants hear a signal tone.
If the **first** internal participant presses the end call key ☎, the handset that has "listened in" remains connected to the external participant.

Setting the alarm clock

Activating/deactivating the alarm clock
MENU ➔ **Alarm Clock** ➔ **OK**
➔ **Activation** ➔ **OK** (✓ = on)

When activated:
➔ Set the wake-up time ➔ **OK**
When the alarm clock rings, press any key to switch it off for 24 hours.
If the alarm clock is set, the wake-up icon ⏰ will appear on the screen and the wake-up time will be displayed instead of the date.

Setting the wake-up time
MENU ➔ **Alarm Clock** ➔ **OK**
➔ **Wake-up time** ➔ **OK**
Enter the wake-up time in hours and minutes, then press **OK**.

Entering letters/characters

Press the relevant key the number of times indicated.
Briefly press the hash key # to switch from "Abc" to "123" mode, from "123" to "abc" mode and from "abc" to "Abc" mode.

Standard characters

	1	2	3	4	5	6	7	8	9	10	11	12	13	14
1	␣[1]	1	£	$	¥	¤								
2	a	b	c	2	ä	á	à	â	ã	ç				
3	d	e	f	3	ë	é	è	ê						
4	g	h	i	4	ï	í	ì	î						
5	j	k	l	5										
6	m	n	o	6	ö	ñ	ó	ò	ô	ō				
7	p	q	r	s	7	ß								
8	t	u	v	8	ü	ú	ù	û						
9	w	x	y	z	9	ÿ	ý	æ	ø	å				
0	.	,	?	!	0	+	-	:	¿	¡	"	'	;	_
*▲	*	/	(	)	<	=	>	%						
#⁼°	Abc 123	123 abc	#	@	\	&	§							

1) Space

Safety

Safety precautions

Read this user guide and the safety precautions carefully before use. Explain their content and the potential hazards associated with using the telephone to your children.

- Only use **the mains adapter supplied**.
- Fit only the **recommended, rechargeable batteries**, i.e. never use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury.
- The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.
- Do not hold the rear of the handset to your ear when it is ringing. Otherwise you risk serious and permanent damage to your hearing.
  The handset may cause an unpleasant humming noise in hearing aids.
- Do not install the phone in a bathroom or shower room. The handset and base station are not splashproof.
- Do not use your phone in environments with a potential explosion hazard, e.g. paint shops.
- If you give your Gigaset to someone else, make sure you also give them the user guide.
- Please remove faulty base stations from use or have them repaired by Service, as they could interfere with other wireless services.
- **Disposal:**
  Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority or the dealer you purchased the product from.
  All electrical and electronic equipment must be disposed of separately from general household waste using the sites designated by local authorities. If a product displays this symbol of a crossed-out rubbish bin, the product is subject to European Directive 2002/96/EC. The appropriate disposal and separate collection of used equipment serve to prevent potential harm to the environment and to health. They are a precondition for the re-use and recycling of used electrical and electronic equipment.
  For further information on disposing of your used equipment, please contact your local authority, your refuse collection service or the dealer you purchased the product from.

Emergency numbers cannot be dialled if the keypad lock is activated!
Not all of the functions described in this user guide are available in all countries.

Care

Wipe down the base station and handset with a **damp** cloth (no solvents) or an antistatic cloth. **Never** use a dry cloth. This can cause static.

Contact with liquid ⚠

If the handset should come into contact with liquid:
- **Switch the handset off and remove the batteries immediately.**
- Allow the liquid to drain from the handset.
- Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place for **at least 72 hours** (**not** in a microwave, oven etc.).
- **Do not switch on the handset again until it is completely dry.**

When it has fully dried out, you will normally be able to use it again.

ECO DECT

You are helping to protect the environment with your Gigaset AS285.

Reduced energy consumption

Your telephone has a power-saving adapter plug and uses less power.

Reduced transmission power

The transmission power of your telephone is reduced **automatically**:
The **handset's** transmission power is reduced depending on the distance to the base station. The transmission power **on the base station** is reduced to virtually zero when only one handset is registered and the handset is in the base station.
You can reduce the transmission power of the handset and base station **even more** by using **Eco Mode**/**Eco Mode+**:
- **Eco Mode:** 80% transmission power reduction in standby mode and during a call (the range of the base station is reduced).
- **Eco Mode+:** 100% transmission power deactivation in standby mode (top left display icon 🄴). **Press and hold** the talk key ✆ to check that the base station can be reached. You will hear the ringing tone if the base station can be reached.

Specifications

Recommended batteries

Technology: Nickel-metal-hydride (NiMH)
Size: AAA (Micro, HR03)
Voltage: 1.2 V
Capacity: 400–800 mAh
We recommend the following types of battery: GP 550/700 mAh, Yuasa Phone 700/800 mAh, Peacebay 550/650 mAh (Valid at the time of going to press). The handset is supplied with recommended batteries.

Base station power consumption

In standby mode – Handset in base station – Handset outside base station	approx. 1.3 W approx. 1.3 W
During a call	approx. 1.5 W

General specifications

DECT standard	is supported
GAP standard	is supported
Range	up to 300 m outdoors up to 50 m indoors
Base station power supply	230 V ~/50 Hz
Environmental conditions in operation	+5°C to +45°C, 20% to 75% relative humidity

Guarantee Certificate United Kingdom

Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:
- In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Gigaset Communications shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- This Guarantee shall be invalid if the device defect is attributable to improper treatment and/or failure to comply with information contained in the user guides.
- This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e. g. installation, configuration, software downloads). User guides and any software supplied on a separate data medium shall be excluded from the Guarantee.
- The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- Ownership of devices or components replaced by and returned to Gigaset Communications shall vest in Gigaset Communications.
- This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the United Kingdom the Guarantee is issued by: Gigaset Communications UK Limited, Quatro House, Lyon Way, Camberley, Surrey, GU16 7ER.
- Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- Insofar as no Guarantee default exists, Gigaset Communications reserves the right to charge the customer for replacement or repair.
- The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Gigaset Communications telephone service. The relevant number is to be found in the accompanying user guide.

Authorisation

This device is intended for analogue phone lines in the UK. Country-specific requirements have been taken into consideration.
We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC. A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address: www.gigaset.com/docs

CE 0682

Issued Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt.
Manufactured by Gigaset Communications GmbH under trademark license of Siemens AG.
As of 1 Oct. 2011 Gigaset products bearing the trademark "Siemens" will exclusively use the trademark "Gigaset".

© Gigaset Communications GmbH 2010
All rights reserved. Subject to availability.
Rights of modification reserved.
www.gigaset.com

This user guide is made from 100% recycled paper.

A31008-M2036-L171-1-7619